

# deffner & Johann

Produkte für DENKMALPFLEGE | RESTAURIERUNG | ART HANDLING – SEIT 1880.


## QUICK MANUAL

[info@deffner-johann.de](mailto:info@deffner-johann.de) | +49 (0)9723 9350-0

Die in diesem Produktdatenblatt genannten Spezifikationen dienen nur zur Produktbeschreibung und beziehen sich auf den Zeitpunkt unmittelbar nach der Produktion bzw. Import des Produktes. Sie entsprechen den Angaben des Herstellers. Eine rechtsverbindliche Zusicherung bestimmter Eigenschaften oder der Eignung für einen bestimmten Einsatzzweck kann hieraus nicht abgeleitet werden. Durch unsachgemäßen Transport und / oder unsachgemäße Lagerung können sich Änderungen ergeben. Die Angaben in diesem Produktdatenblatt entbinden den Verarbeiter nicht von eigener Prüfung der Eigenschaften des Produktes und dessen Eignung für die vorgesehene Verwendung.


## General information

HörnPac consists of two parts, delivered as flatware.

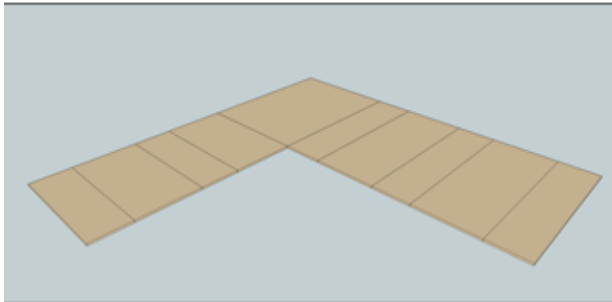

### 1. HörnPac Corner:

Ill. 1: shape at delivery

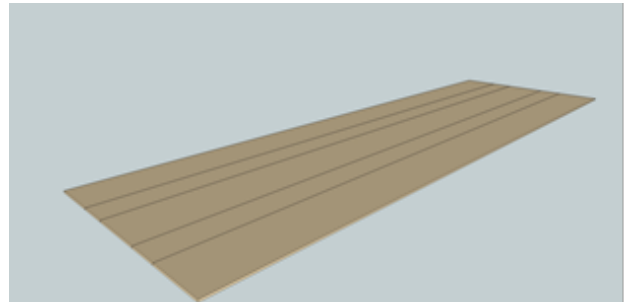

### 2. HörnPac Side Part:

Ill. 2: shape at delivery

## Assembly

For packaging one picture, four corners plus four side parts are required.

### Basic Tools:

Pencil

Cutter

Tape (50 mm), z. B.

Stretch film, with

Hand Dispenser

Packing Stapler

Staples

Item no.: 4694 020

Item no.: 6318 025

Item no.: 2791 100

Item no.: 2791 110


Item no.: 2855 100

Item no.: 2855 110


## Step 1: Fold the corner parts of HörnPac (Art.-Nr.: 2785 100)

Fold the HörnPac corners along the fold lines and secure the folded parts with two adhesive tapes or staples.

HörnPac Corner:

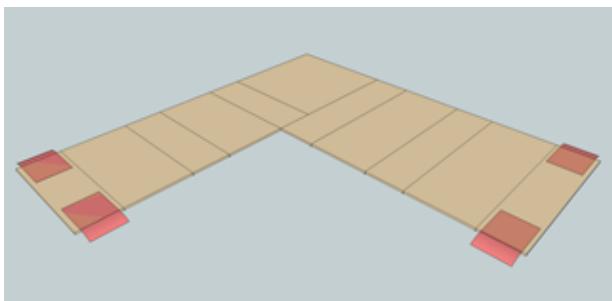

Ill. 3: place tape on the corners before folding  
(text facing downward)

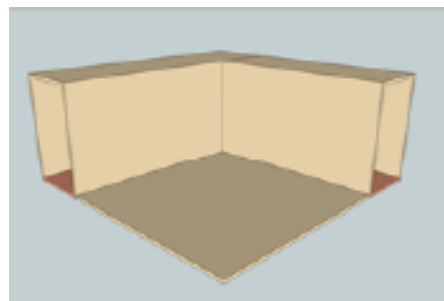


Ill. 4: assembled HörnPac Corner


**Step 2: Folding the HörnPac side part (Art. Nr.: 2785 110)**

The HörnPac side panels are also folded and secured with adhesive tape or staples.

**HörnPac side part:**

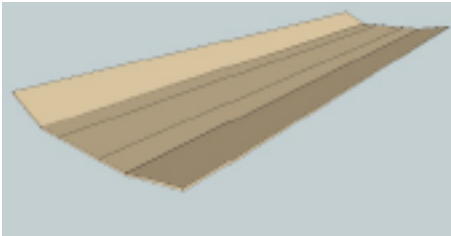

III. 5: preparation for assembly

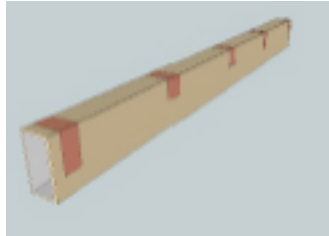

III. 6: assembled HörnPac side part



III. 7: correct cross-section

**Schritt 3: Assemble HörnPac**


Transfer the edge length of the frame/painting to the HörnPac sides. The dimension can be 5 – 6 cm shorter than the edge length of the frame/painting. Always cut two of the same length (no illustration).

**Schritt 4: HörnPac zusammenstecken**


4 a: Take the four HörnPac corner pieces and the corresponding adaptations HörnPac sides, and insert it as shown in the illustrations (III. 8).

4 b: The frame/painting (wrapped in non woven and/or LDPE film) is added to the assembled HörnPac-transport frame (III. 9). I


4 c: The HörnPac part can now be pushed up to firmly touch the frame/painting. Secure the HörnPac corners with stretch film (III. 10), or use one of the alternative methods mentioned (see main manual p. 2).

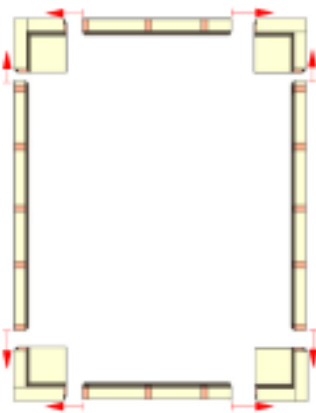

III. 8: Step 4 a

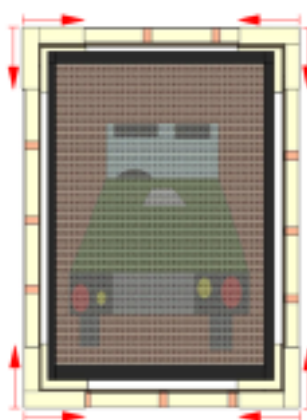

III. 9: Step 4 b

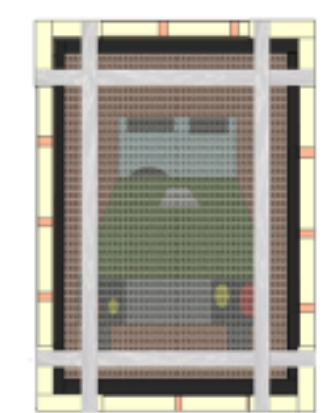

III. 10: Step 4 c

## Check-List, available at: Deffner & Johann:

Item no.	Product
2785 100	HörnPac corner
2785 110	HörnPac side
2791 100	Stretch film, 10 x 100 m
2791 110	Dispensers for stretch film
2719 045	Packing nonwoven, roll 500 x 120 cm
2219 050	Packing nonwoven, 25 sheets 70 x 100 cm
2701 152	Tyvek® Soft-PE-fleece 1623 E, 41 g/m <sup>2</sup> , roll 152,4 cm x 50 m
2701 100	Tyvek® Soft-fleece 1623 E, 41 g/m <sup>2</sup> , roll 101 cm x 25 m
2724 100	Bubble Wrap, thickness 70 µ, bubble Ø ca. 10 mm, roll 1 m x 100 m
2791 600	Letteringpen, permanent twin tip (0,3 and 1,5 mm)
2855 100	Packaging Stapler
2855 110	Staples